


TOP VIEW

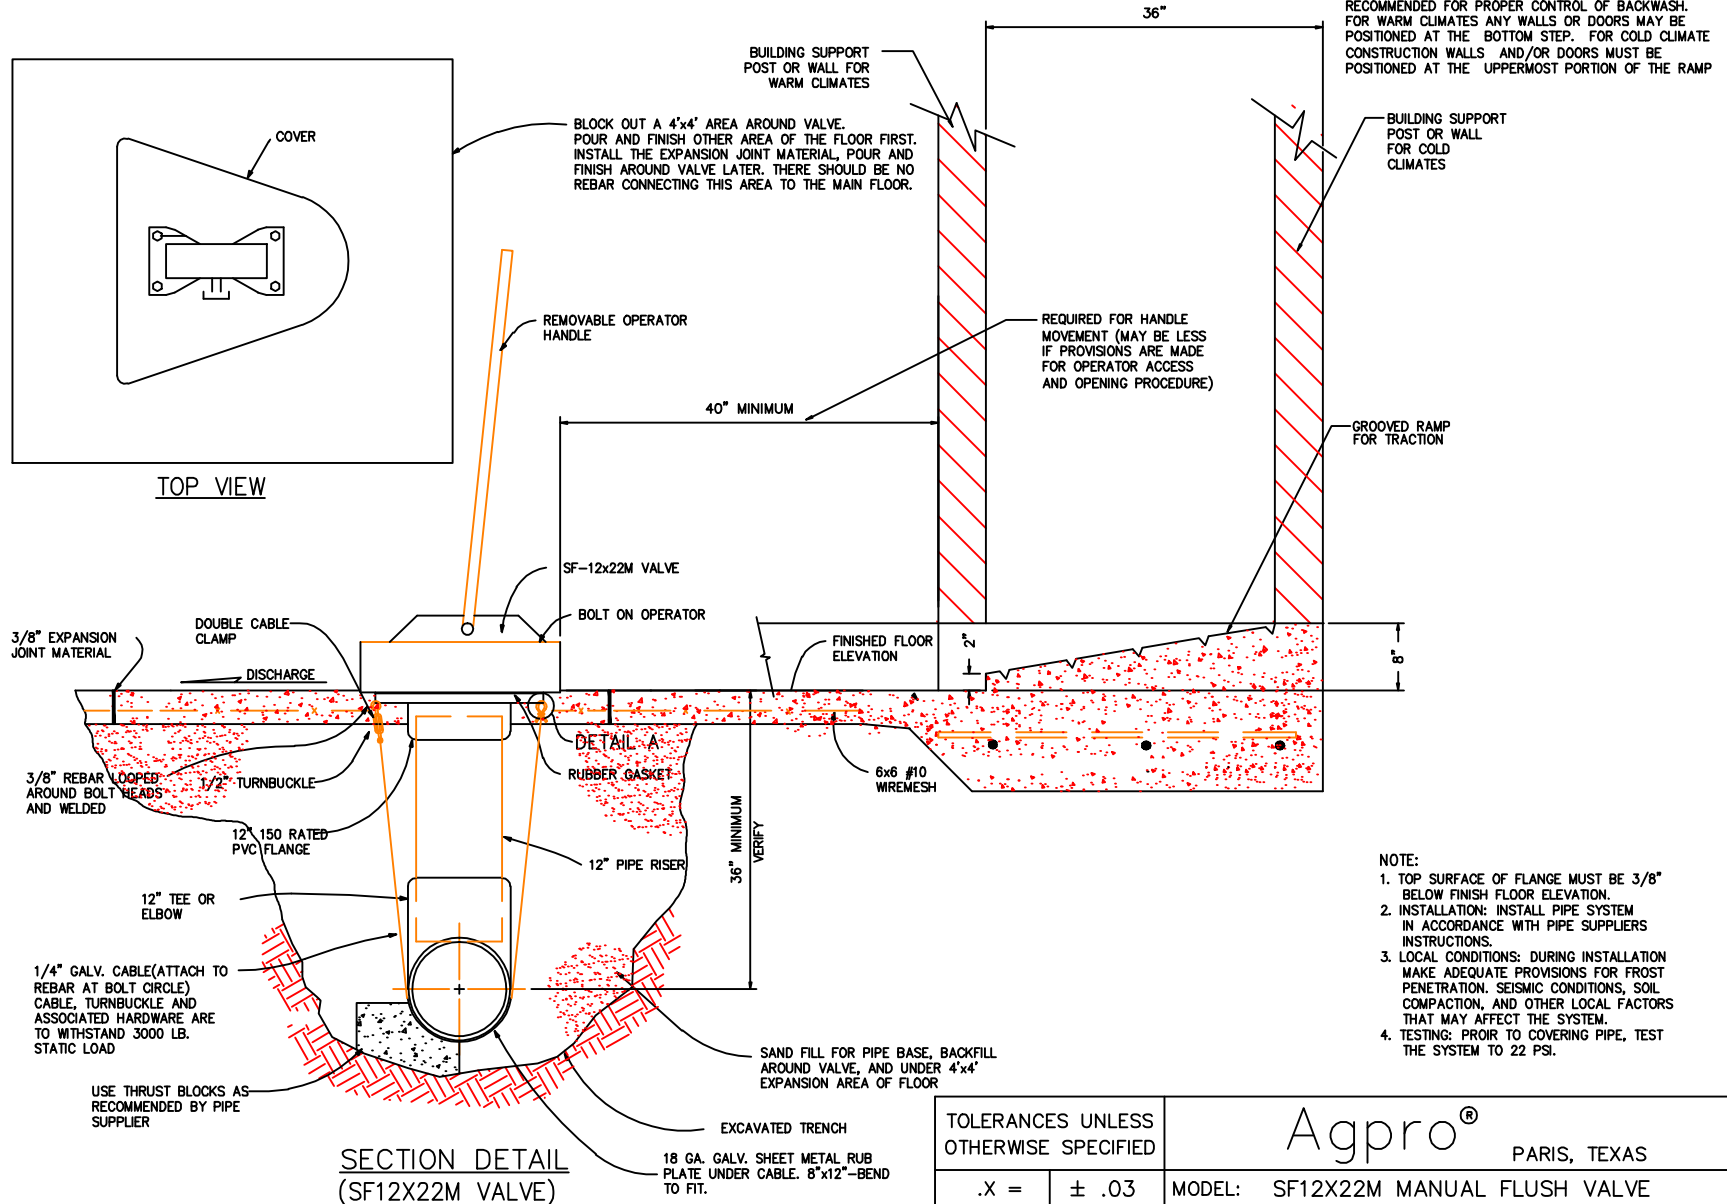

SECTION DETAIL (SF12X22M VALVE)

TYPICAL INSTALLATION

NOTE:
 FLOW CAN AND DOES TRAVEL BEHIND VALVE. THE STEP/RAMP COMBINATION DEPICTED IN DRAWING IS RECOMMENDED FOR PROPER CONTROL OF BACKWASH. FOR WARM CLIMATES ANY WALLS OR DOORS MAY BE POSITIONED AT THE BOTTOM STEP. FOR COLD CLIMATE CONSTRUCTION WALLS AND/OR DOORS MUST BE POSITIONED AT THE UPPERMOST PORTION OF THE RAMP

- NOTE:**
1. TOP SURFACE OF FLANGE MUST BE 3/8" BELOW FINISH FLOOR ELEVATION.
 2. INSTALLATION: INSTALL PIPE SYSTEM IN ACCORDANCE WITH PIPE SUPPLIERS INSTRUCTIONS.
 3. LOCAL CONDITIONS: DURING INSTALLATION MAKE ADEQUATE PROVISIONS FOR FROST PENETRATION, SEISMIC CONDITIONS, SOIL COMPACTION, AND OTHER LOCAL FACTORS THAT MAY AFFECT THE SYSTEM.
 4. TESTING: PRIOR TO COVERING PIPE, TEST THE SYSTEM TO 22 PSI.

TOLERANCES UNLESS OTHERWISE SPECIFIED		Agpro® PARIS, TEXAS		
.X =	± .03	MODEL: SF12X22M MANUAL FLUSH VALVE		
.XX =	± .010	DESCRIPTION: INSTALLATION		
.XXX =	± .005			
APPROVAL	BY	SCALE:	DATE:	DRAWING NO.
DRAWN	MCM	NONE		
CHECKED		SHT: 5	REVISED:	BY: